


**** PRELIMINARY ****
Dual-Latching Relay Module

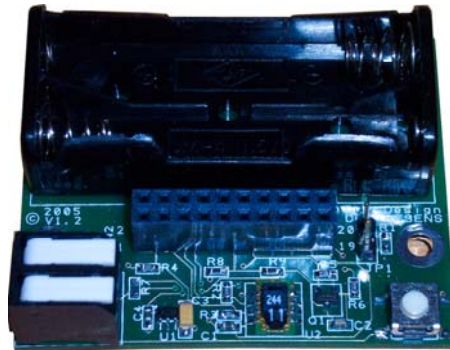

Overview

The DLP-RF2RELAY is designed for use with the DLP-RF2 transceiver (purchased separately) and serves as a design example demonstrating several features of the DLP-RF2. The DLP-RF2RELAY demonstrates the use of latching relays, a battery power measurement system, a door switch input, and the low-power mode of operation.

Using the pre-programmed SIPP™ firmware, the DLP-RF2 ships from the factory with functionality to support each of these features.

(Schematics for the DLP-RF2RELAY are available for download upon purchase.)

Low-Power Mode

The DLP-RF2RELAY holds Port Pin RX2/C1 low at power up of the DLP-RF2. If using the SIPP firmware in the DLP-RF2 as shipped from DLP Design, upon power up the DLP-RF2RELAY and DLP-RF2 board set will immediately enter low-power mode drawing less than 40 microamps of current from the two AA batteries. The RF2 module will wake from the low-power mode either periodically (based on a preset value in the setup of the DLP-RF2) or in response to a change on the door switch input. Upon wake up, the DLP-RF2 will attempt to check in with the system controller. Once communications with the host controller are complete, the RF2 will return to low-power mode.

Refer to the datasheet for the DLP-RF2 for additional details on the low-power mode.

Door Switch

Wiring Terminal CN1 is provided on the DLP-RF2RELAY for connection to a set of normally open or normally closed door switch contacts. When the door switch contacts are opened or closed, the DLP-RF2 is brought out of sleep mode and a broadcast packet (Destination ID=0) is transmitted. The system controller transceiver (DLP-RF1 or DLP-RF2) responds to this packet by requesting the battery voltage and/or change the state of the relays. The system controller then has the option of instructing the DLP-RF2RELAY and DLP-RF2 board set to return immediately to sleep.

Latching Relays

The two relays used are latching-type relays and, as such, will only draw current from the batteries when changing states. The process of changing states takes about 10 milliseconds and requires a high-low pulse on one of four digital I/O lines from the DLP-RF2 transceiver:

- To position Relay K1 to the RESET position, pulse B3 high for 10mS.
- To position Relay K1 to the SET position, pulse B1 high for 10mS.
- To position Relay K2 to the RESET position, pulse B6 high for 10mS.
- To position Relay K2 to the SET position, pulse B5 high for 10mS.

If using the SIPP firmware in the DLP-RF2 as shipped from DLP Design, commands for these features are provided.

Contact specifications are as follows (the contacts were connected in parallel to achieve these ratings):

Contact Ratings: 120W, 250VA

Max Switching Voltage: 220VDC, 250 VAC

Max Switching Current: 4A

Max Carrying Current: 4A

Battery Power Measurement

The battery power measurement system works by placing a light load (approximately 10 milliamps) on the two AA batteries and then measuring the battery voltage using the A/D converter in the DLP-RF2. A 2.1-volt voltage regulator is used as a voltage reference to set the maximum voltage for the A/D converter in the DLP-RF2. The connection from the batteries to the A/D converter is made via a voltage divider so that the battery voltage (~3.2V max) is within the range of the 2.1-volt reference after being divided by two.

A MOSFET switch is used to disable the battery power measurement circuitry when not in use such that no load is placed on the batteries.

Disclaimer

Neither the whole nor any part of the information contained herein nor the product described in this datasheet may be adapted or reproduced in any material or electronic form without the prior written consent of the copyright holder.

This product and its documentation are supplied on an as-is basis, and no warranty as to their suitability for any particular purpose is either made or implied. DLP Design will not accept any claim for damages whatsoever arising as a result of use or failure of this product. Your statutory rights are not affected.

This product or any variant of it is not intended for use in any medical appliance, device, or system in which the failure of the product might reasonably be expected to result in personal injury.

This document provides preliminary information that may be subject to change without notice.

Contact Information

DLP Design, Inc.
1605 Roma Lane
Allen, TX 75013

Phone: 469-964-8027
Fax: 415-901-4859

Email: support@dlpdesign.com
Internet: <http://www.dlpdesign.com>